
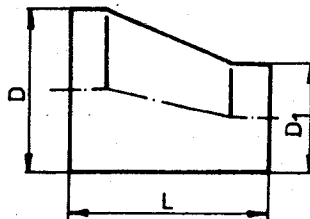


Přechody trubkové DN 20 až DN 1000

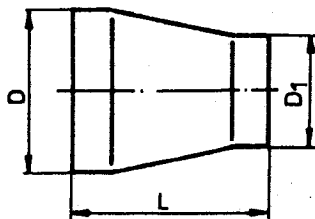

DN	DN ₁	D	D ₁	L
20	15	26,9	21,3	38
25	20	33,7	26,9	51
	15		21,3	
32	25	42,4	33,7	51
	20		26,9	
	15		21,3	
40	32	48,3	42,4	64
	25		33,7	
	20		26,9	
50	40	60,3	48,3	76
	32		42,4	
	25		33,7	
65	50	76,1	60,3	89
	40		48,3	
	32		42,4	
80	65	88,9	76,1	89
	50		60,3	
	40		48,3	
100	80	114,3	88,9	102
	65		76,1	
	50		60,3	
125	100	139,7	114,3	127
	80		88,9	
	65		76,1	
150	125	168,3	139,7	140
	100		114,3	
	80		88,9	
200	150	219,1	168,3	152
	125		139,7	
	100		114,3	

DN	DN ₁	D	D ₁	L
250	200	273,0	219,1	178
	150		168,3	
	125		139,7	
300	250	323,9	273,0	203
	200		219,1	
	150		168,3	
350	300	355,6	323,9	330
	250		273,0	
	200		219,1	
400	350	406,4	355,6	356
	300		323,9	
	250		273,0	
500	400	508,0	406,4	508
	350		355,6	
600	500	610,0	508,0	508
	400		406,4	
700	600	711,0	610,0	610
	500		508,0	
800	700	813,0	711,0	610
	600		610,0	
	500		508,0	
900	800	914,0	813,0	610
	700		711,0	
	600		610,0	
1000	900	1016,0	914,0	610
	800		813,0	
	700		711,0	

Norma platná od 1. 1. 1991

Tiskařská 690/6a, 108 00 Praha 10
 Tel.: +420 272 700 860
 Fax: +420 272 702 153
 GSM brána: 602 182 090, 606 600 081
 E-mail: trival@trival.cz

NON-STOP 24 HOD. INFORMAČNÍ
 A DODÁVKOVÁ SLUŽBA: 602 217 549
 602 651 061
 602 219 979

www.trival.cz